



# Nikon Coolpix 995 LCD Replacement

Disassembly of the Nikon Coolpix 995 camera and removal of the LCD display.

Written By: Cory Layman



## INTRODUCTION

This iFixit guide shows you how to disassemble the Nikon Coolpix 995 camera, and remove/replace the LCD display.


---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — LCD

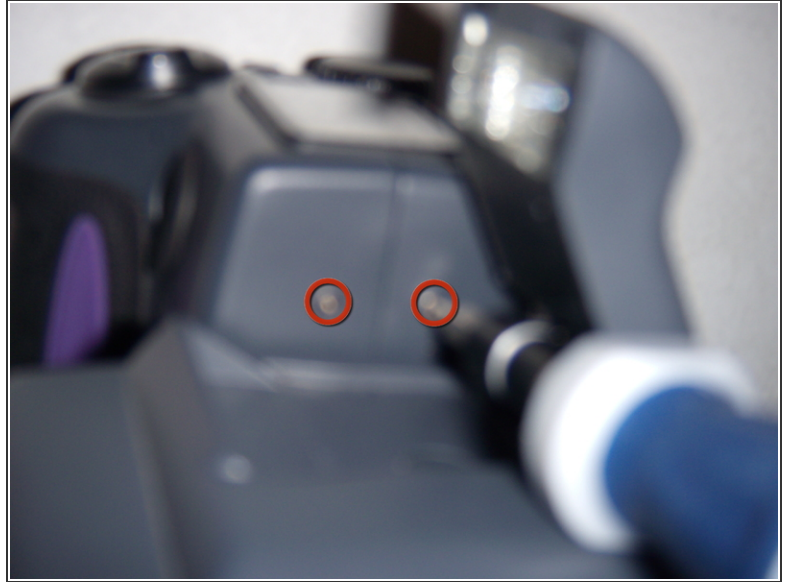

- Turn the lens/flash assembly 90 degrees, until you see the two Phillips #00 screws.
- ⓘ Refer to the image to locate the two screws. The screws are highlighted in red.
- Remove the two screws with a Phillips #00 screwdriver.
- Flip the flash so that you can access the remaining two screws. Remove these screws following the same method as before.
- ⓘ Refer to the second image to locate the second set of screws. The relevant screws are highlighted in red.
- ⚠ Be careful while removing the screws. Do not strip or ruin the screws. You will need them to reassemble the camera.



## Step 2



- Flip the camera up-side down, so you can see the bottom of it.
- Remove the two Phillips #00 screws located near the battery compartment.

⚠ Do not strip or ruin these screws. You will need them to reassemble the camera.


## Step 3



- Hold the camera so the memory card compartment faces you.
- Flip the compartment cover of the memory card and the rubber cover of the AUX port.
- You can now see four screws under the cover. Remove all four screws.

⚠ Refer to the image to locate the four screws. Make sure that you remove only the four screws identified in the image.


## Step 4

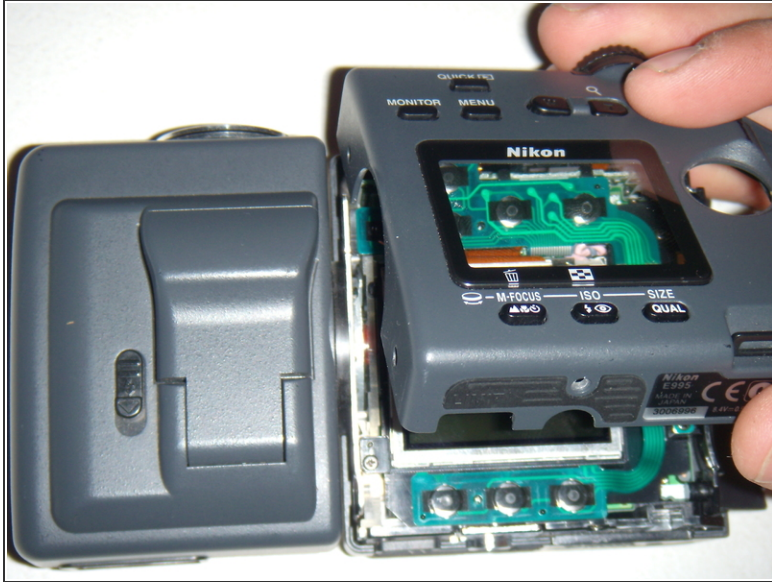

- Use your thumb to carefully lift the bottom side of the casing near the battery.

⚠ Pay attention to a cable located at the top of the assembly, as it is prone to breakage. Refer to the second image to locate the cable.


## Step 5

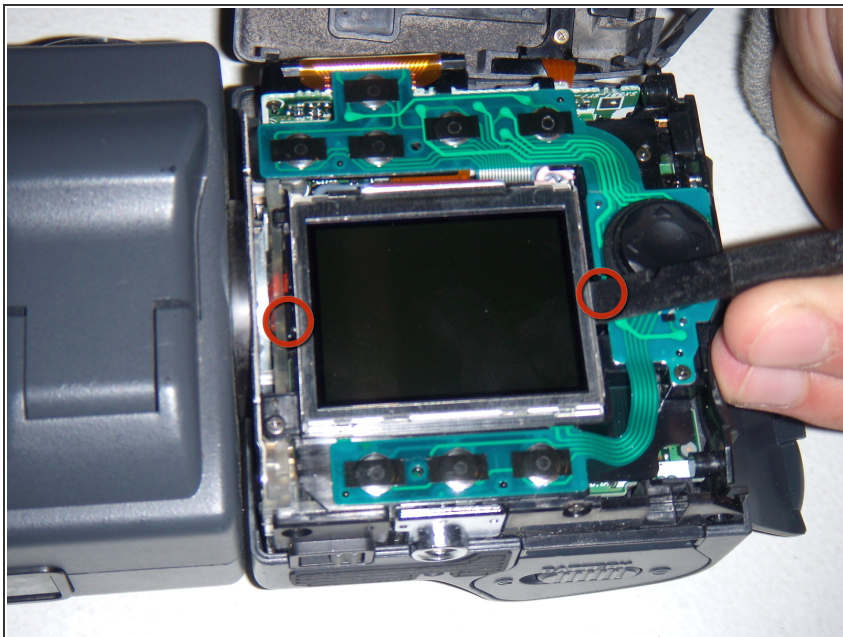

- Use a spudger to move the left tab, so that the screen can move.
  - Repeat the same process on the right tab.
- ⓘ Refer to the image for more details. The tabs are circled in red.



## Step 6

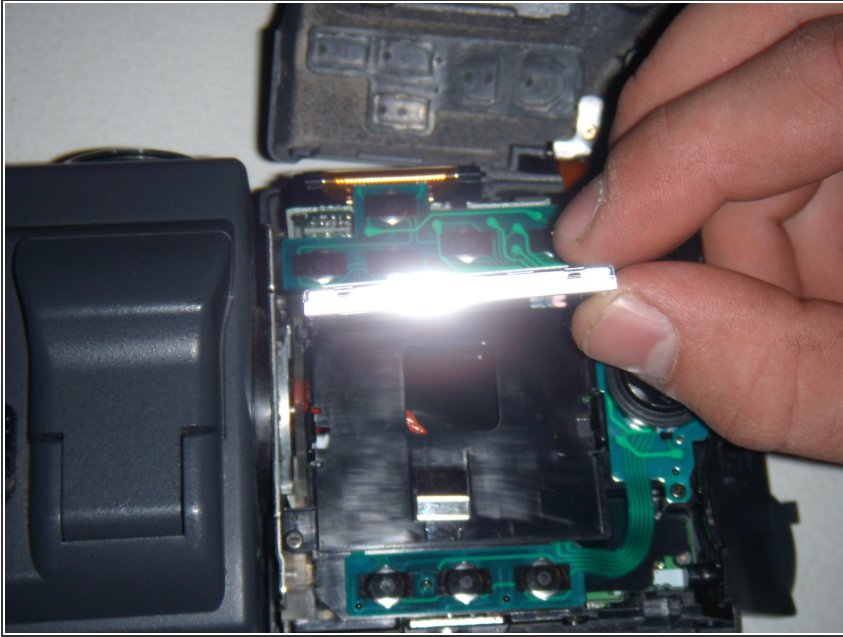

- Carefully lift the LCD from the bottom. It should come out fairly easily.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-02 04:45:07 AM.